



Humidity Generation and Calibration Equipment

THUNDER SCIENTIFIC
CORPORATION THE HUMIDITY SOURCE

Model 2500

Expanded Display Configuration



Tech Support Document TSD-0218
Revision Date: May 5, 2009

623 WYOMING BLVD. SE



ALBUQUERQUE, NM 87123-3198
WWW.THUNDERSIDENTIFIC.COM



TEL: 505.265.8701
FAX: 505.266.6203

Model 2500 Expanded Display Configuration

- 1. Press CHNG/Units Key.



- 2. Press the BLANK Key.



- The 2500 display expands with additional values for Pre-Saturator Heat SetPnt/Actual, Expansion Valve Heat Actual as shown with the arrow pointers.



- Press ENTER to return to main RUN screen.



7. When start up is complete the screen should look like this.



Pre-Sat heat delta should be +15 deg above saturation temperature set-point; expansion valve heat delta should be 1-1.5 deg above chamber temperature actual.

NOTE: Important, do not operate the 2500 in the expanded screen mode reset the screen to the normal display using the same step sequence.

Please call 1-800-872-7728 or E-mail: support@thunderscientific.com for Tech Support.