


Humidity Generation and Calibration Equipment

THUNDER SCIENTIFIC

CORPORATION THE HUMIDITY SOURCE

Model 2500

Cart Filter Maintenance Procedure

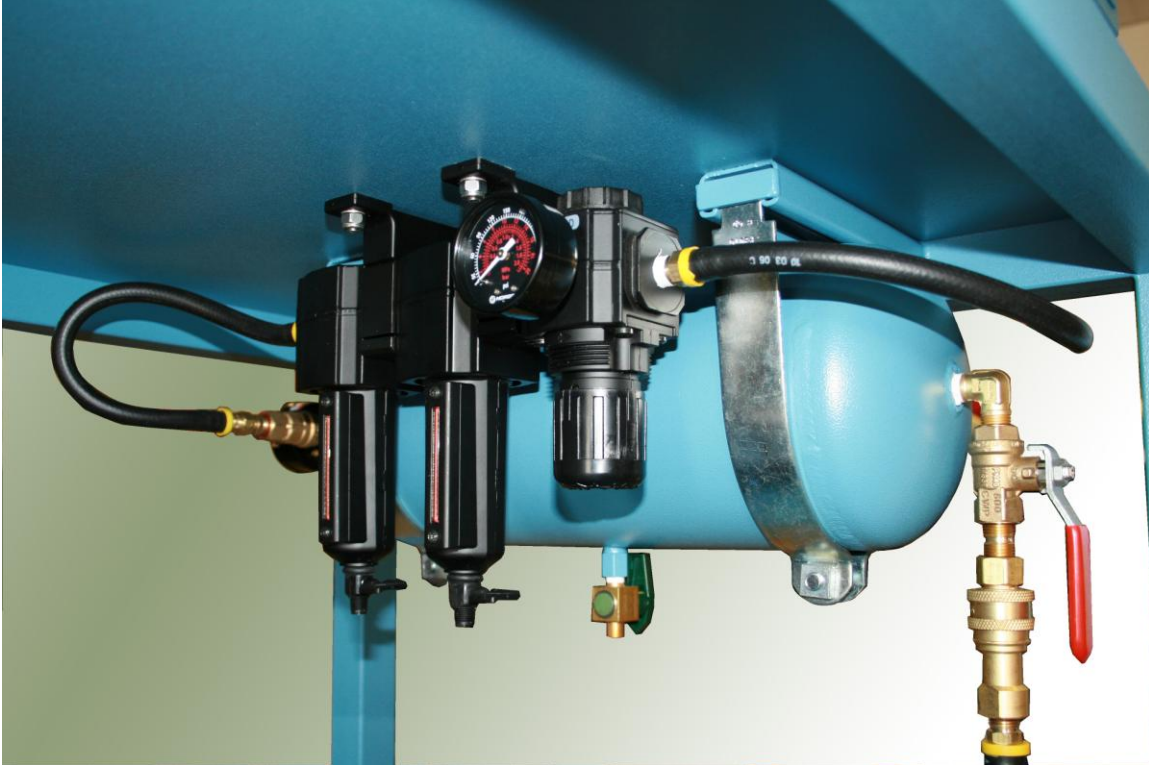


Tech Support Document TSD-0223
Revision Date: August 25, 2009




2500 Cart Filter Maintenance Procedure

1. Disconnect the main power.

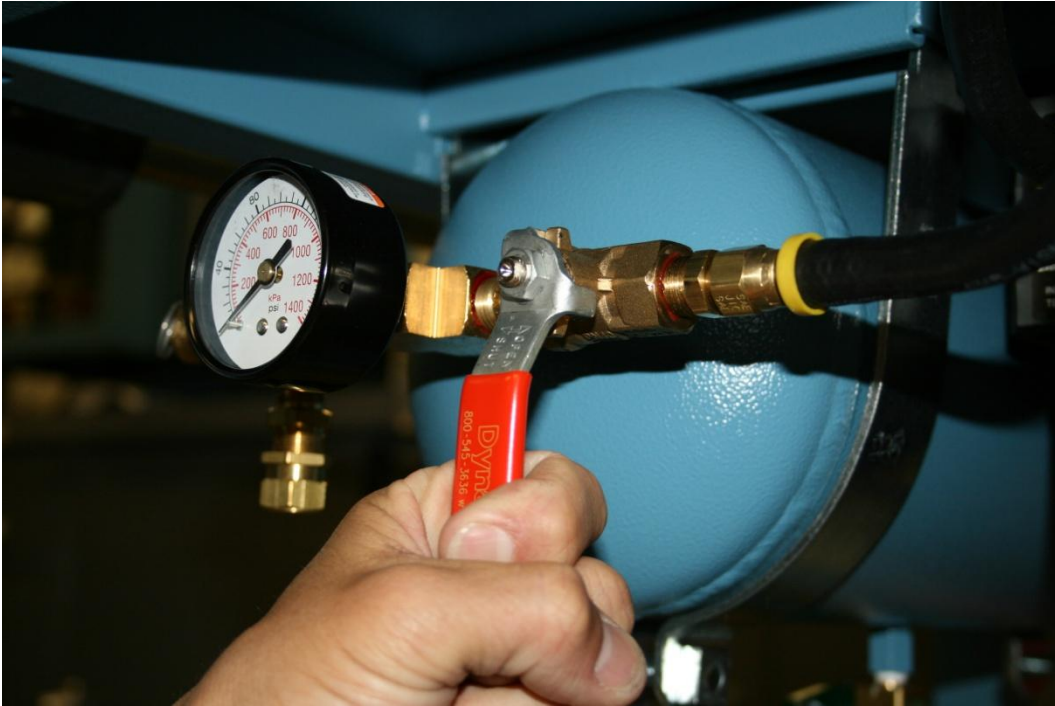

2. Turn off the air tank by shifting the handle to the down position.

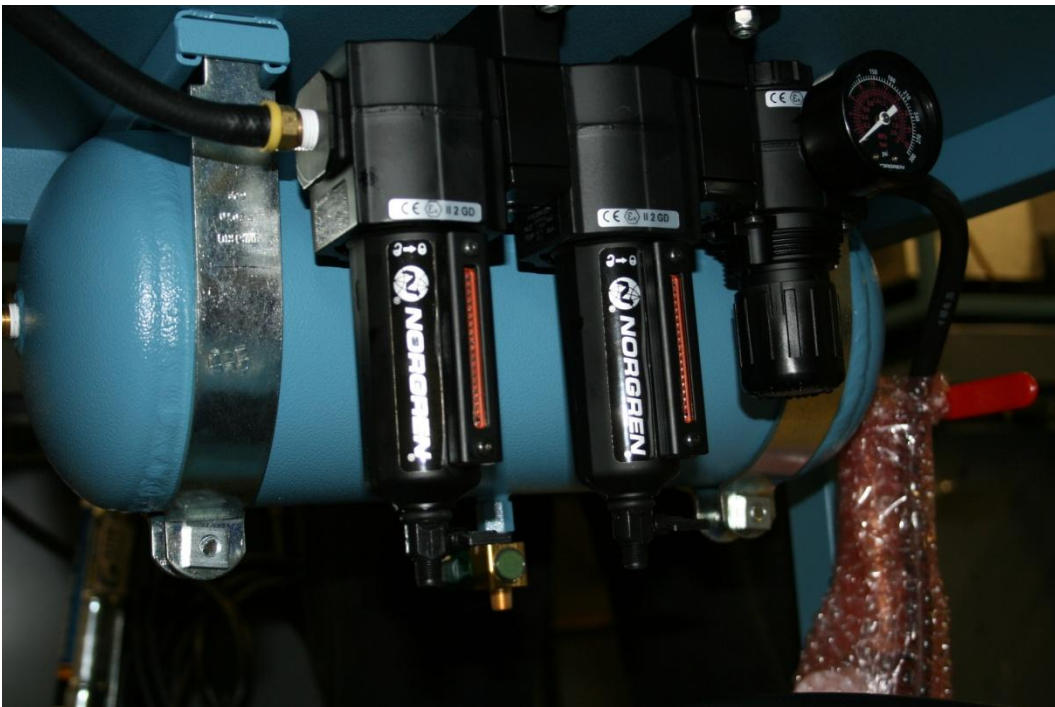

3. Locate the two filters on the underside of the cart top shelf and next to the air tank.



4. Bleed off any air pressure from the filter reservoirs, by turning each drain cock 90°.



5. With a firm grip twist the filter reservoir housing in a counterclockwise direction to release the housing.



8. Replace the filter reservoir housing by pushing it up and rotating clockwise.



9. Next remove the next filter reservoir housing by rotating it counterclockwise.



10. Pull the filter reservoir housing straight down to avoid damaging the filter.



11. Release the filter by rotating it counterclockwise.



14. Rotate the valve handle of the air tank back to the on position, horizontal.
15. Turn the system back on to see if it operates properly.

Should you have any questions, contact Thunder Scientific at 1-800-872-7728 or,
E-mail support@thunderscientific.com.