

Humidity Generation and Calibration Equipment

THUNDER SCIENTIFIC
CORPORATION THE HUMIDITY SOURCE

Model 1200

Humidity Generator Shipping Instructions



Tech Support Document TSD-0247
Revision Date: April 18, 2011

623 WYOMING BLVD. SE



ALBUQUERQUE, NM 87123-3198
WWW.THUNDERSCIENTIFIC.COM



TEL: 505.265.8701
FAX: 505.266.6203

1200 Humidity Generator Shipping Instructions

1. Make sure the power is off on the system.



2. Turn off any air to the system.



3. Disconnect the main power cord connection.



4. Remove the air in hose using a 9/16" wrench and a 1/2" wrench as a backup on the elbow.



5. Remove the air in elbow using a 1/2" wrench and an 11/16" wrench as a backup.



6. Remove the air exhaust hose if one is present.




7. Replace the chamber overflow cap, located at the rear lower left hand corner of the system.




8. Replace the pressure vent cap, located underneath the system support rail at the rear right hand corner of the system.



9. Lift the system using the side handles into the shipping case, making sure the door handle faces the handle cutout in the foam at the front of the case.

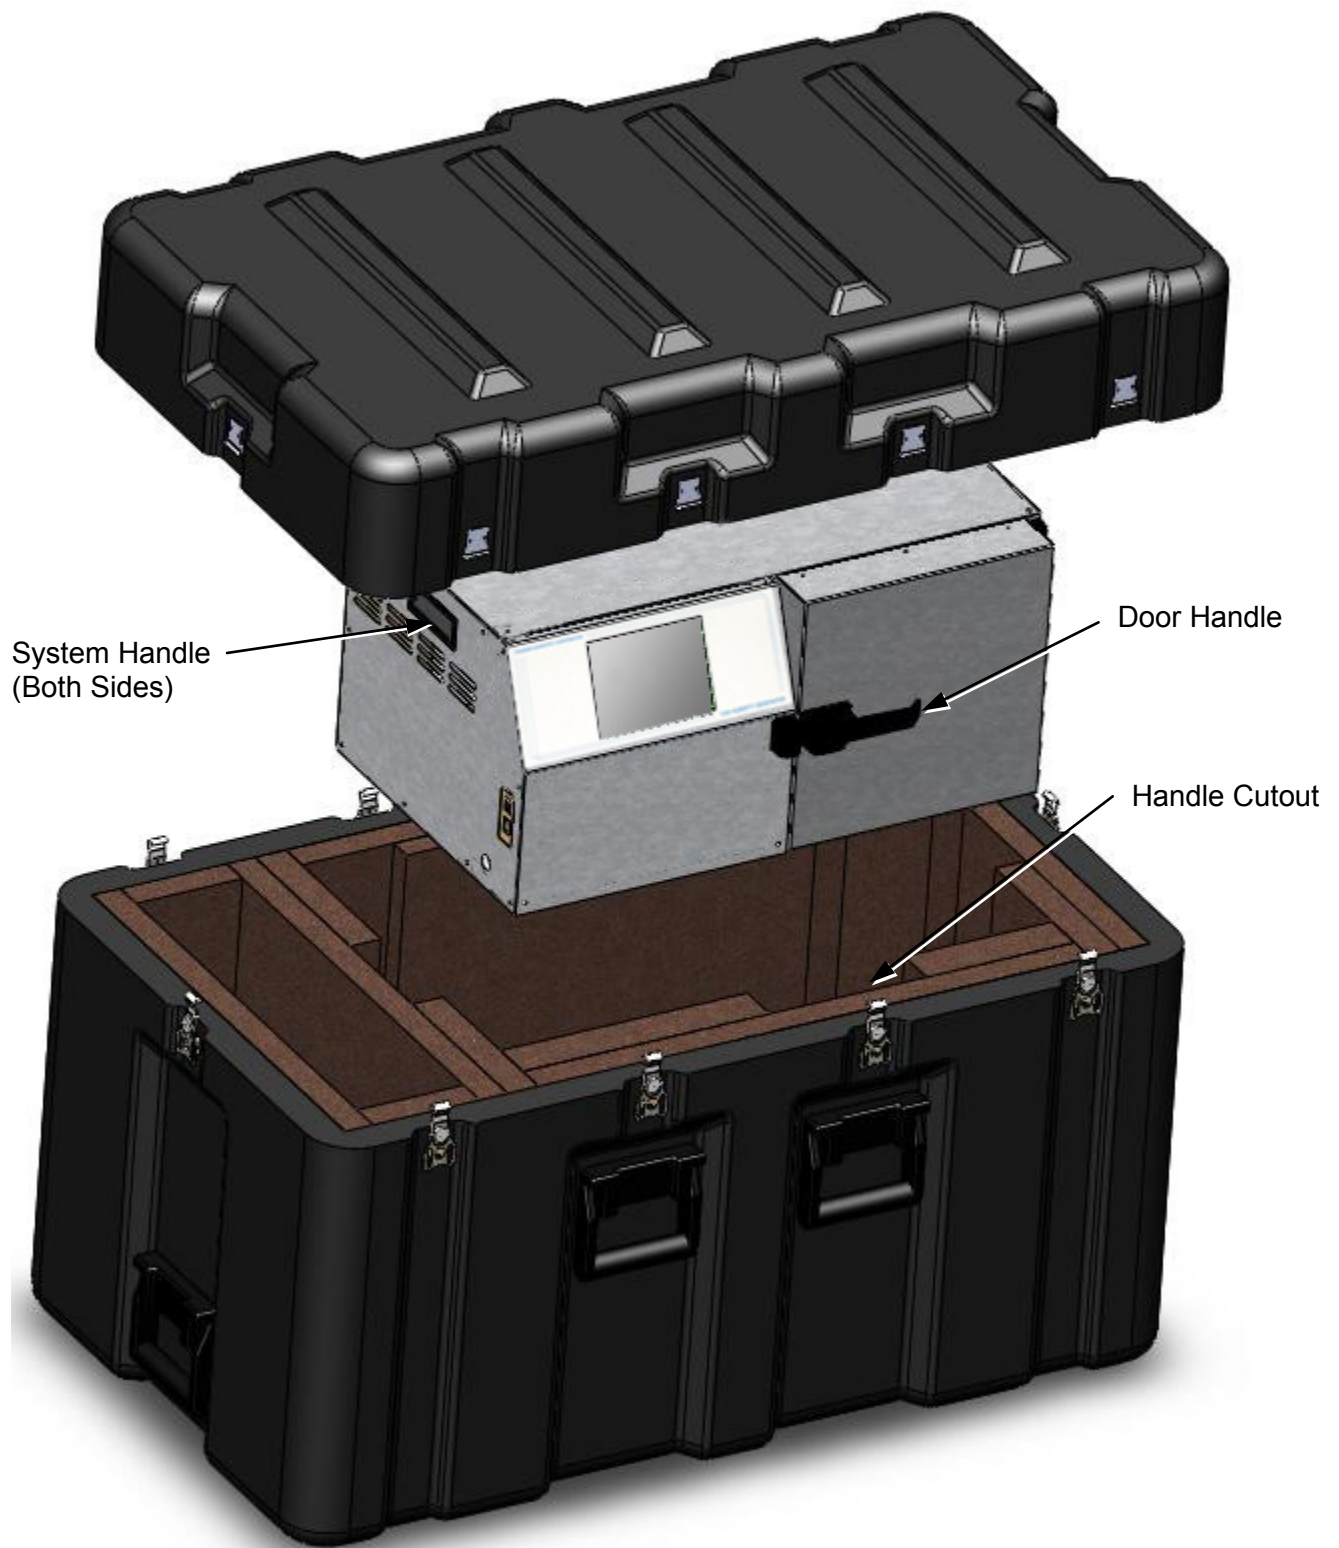

10. Put the case cover on and turn each case clasp until all are secured.

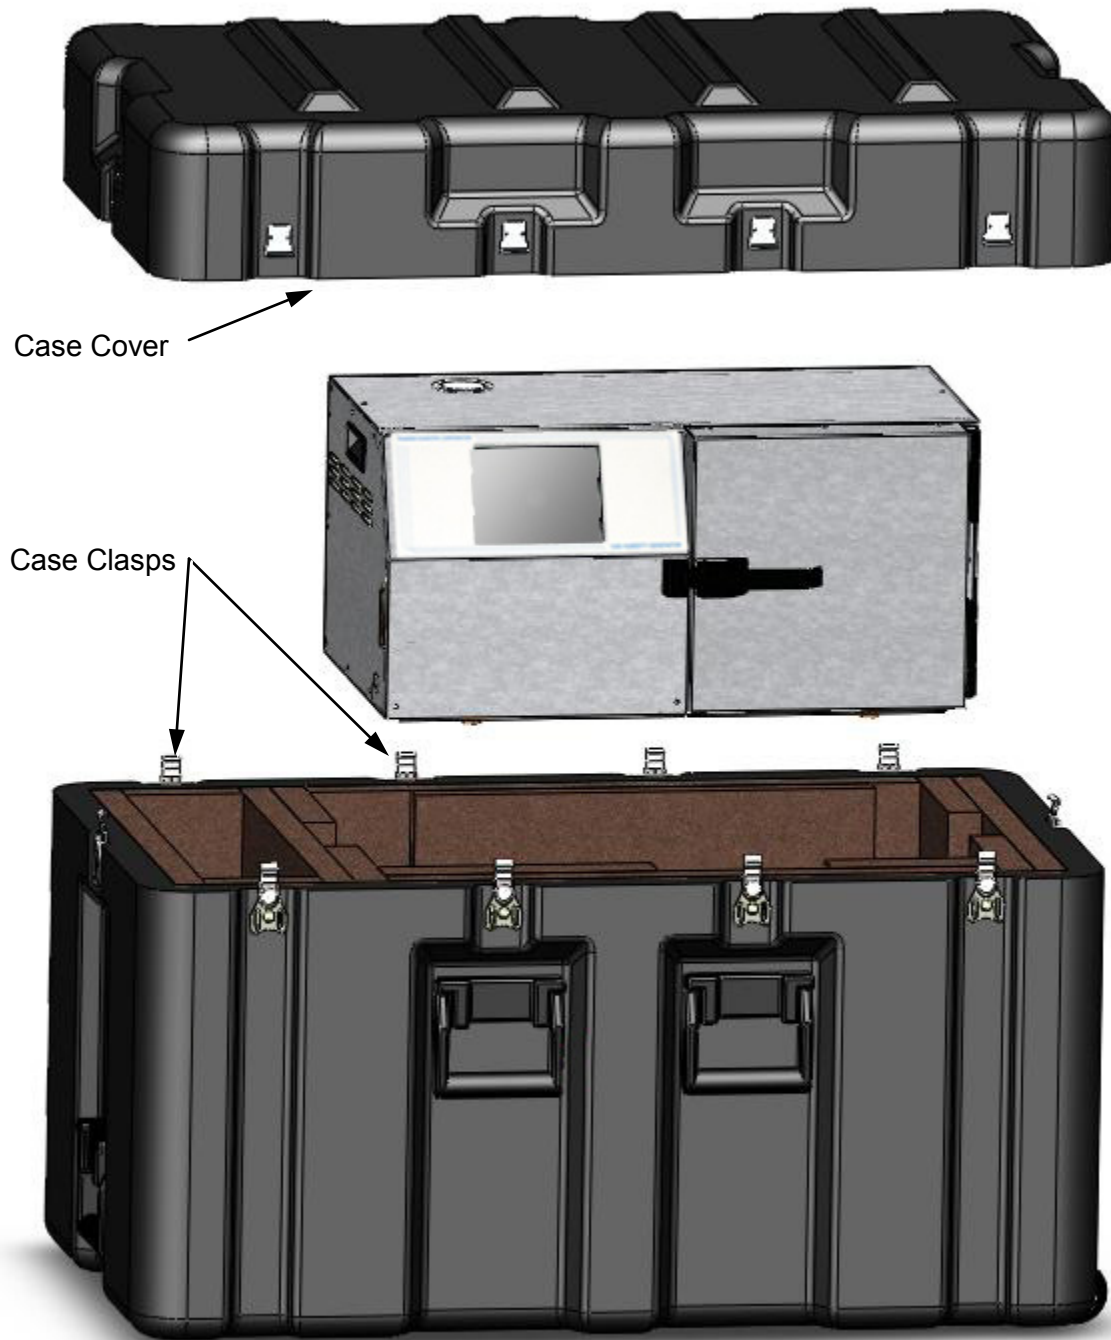

11. Place shipment labels on case.

12. This same procedure can be used with the air compressor system as well.

Please Call 1-800-872-7728, Fax 1-505-266-6203, or E-mail support@thunderscientific.com should you have any questions.