

CAUTION


**REMOVE BOTH CAPS BEFORE OPERATION
OR REPLACE BEFORE SHIPMENT.**

CAP#1



Location of the chamber overflow cap is the lower left hand corner.

CAP#2

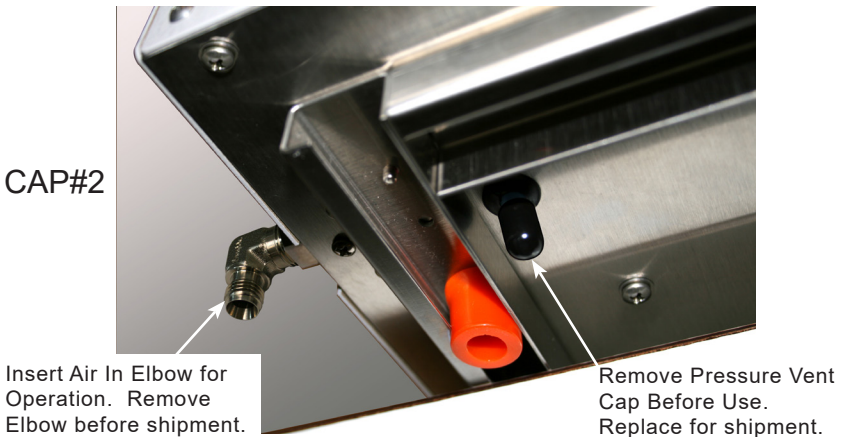

Insert Air In Elbow for Operation. Remove Elbow before shipment.

Location of the pressure vent cap is the rear lower right hand corner.