

Humidity Generation and Calibration Equipment

**THUNDER SCIENTIFIC®**  
**CORPORATION** THE HUMIDITY SOURCE

# *Model 2500*

## Humidity Generator Shipping Instructions



Tech Support Document TSD-0310  
Revision Date: July 14, 2021

623 WYOMING BLVD. SE



ALBUQUERQUE, NM 87123-3198  
[WWW.THUNDERSCIENTIFIC.COM](http://WWW.THUNDERSCIENTIFIC.COM)



TEL: 505.265.8701  
FAX: 505.266.6203

## 2500 Shipping Instructions


1. Before you proceed to the shipping of your 2500, you will need to drain the test chamber of the system, refer to [Tech Support Document, TSD-0208](#) for Chamber draining instructions.
2. Remove the air input hose at the rear of the system.



3. Next remove the air input elbow.



4. Tape chamber temperature probe to the chamber wall.

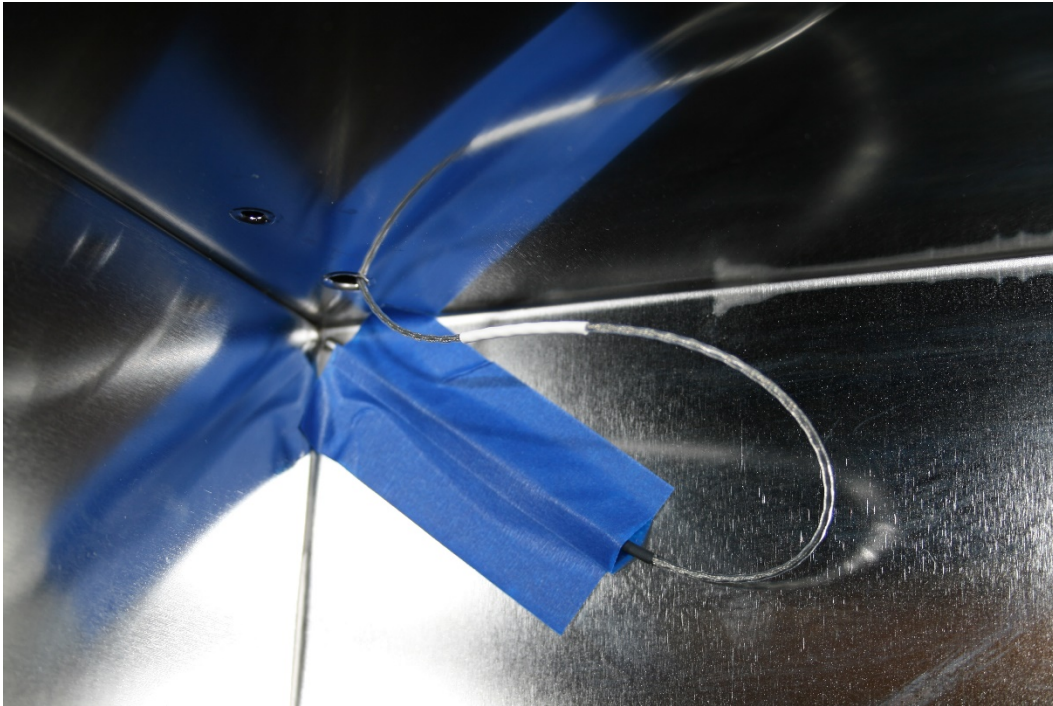

5. Remove the AC Power cord, no need to send it.






6. Remove the blue chamber insulation foam and anything else inside the chamber.



7. If you have a manifold remove it and anything else inside the chamber.

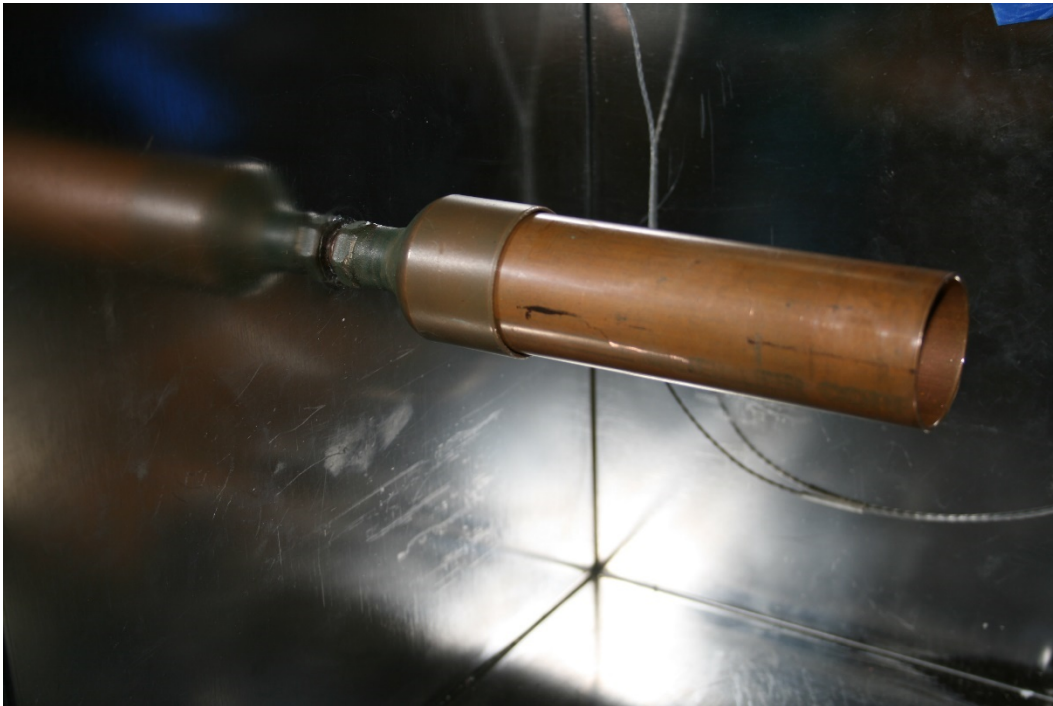

8. Repack in original shipping crate or ask for TSC supplied shipping case.



9. Add the appropriate banding for shipping.





10. Apply shipping label for return to TSC.



Note: It is highly recommended you use an Air-Ride equipped truck when shipping the unit back to Thunder.

Please Call 1-800-872-7728, Fax 1-505-266-6203, or E-mail [support@thunderscientific.com](mailto:support@thunderscientific.com) should you have any questions.