


Thunder Support Document Probe Assembly Instructions



Tech Support Document TSD-0212 Revision Date: October 25, 2005

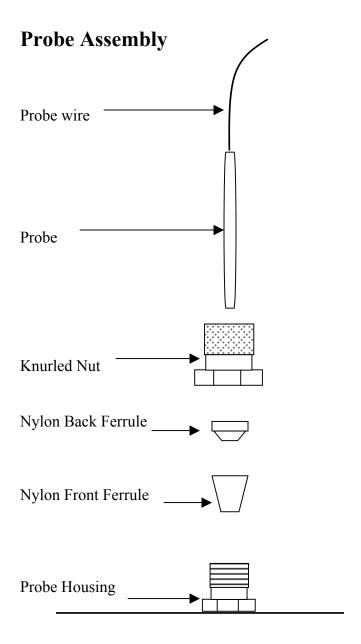



Note: ferrules must retain Probe. Do not use wire to retain.

Tighten just past finger tight.